

OPEN TOP CONTAINER

SPECIFICATIONS

Size: 20'

Type: Open Top

SAFETY PRECAUTIONS

Before using the equipment

- Ensure that the equipment is the correct type for what you intend to use it for
- Ensure that you have been given a physical demonstration on the correct use of this equipment
- Take the time to read this information, and any other information relating to this product (i.e.: decals, brochures, product information)

Entry into the container

- Use caution stepping into, or out of the container. One step up onto the flooring is required
- Keep hands and fingers away from curtain securing poles and corner posts to prevent crush injuries
- Exercise caution with moving parts in windy conditions or when curtain securing poles appear to be damaged

Personal Protective Equipment (PPE)



- Wear gloves, eye wear and non-slip footwear

Site Preparation and Setup

- Set the container down in an area safe from passing traffic onto stable, level ground
- Maintain a safe distance from delivery vehicles. Do not stand under a suspended load or between the moving container and adjacent objects
- Ensure there is enough room to operate the curtain winches and remove and/or refit the curtain securing poles

Opening standard end or side doors on an empty open top container

- 1) Position yourself in front of the right hand side door
- 2) Check the position of the door handles (different manufactures have different handle position)
- 3) Check that any shipping container seals have been removed (also check in the lock box, if fitted)
- 4) Lift up the door latch keeper on both door handles (it should hold in an upright position). Stand in front of the right hand door, toes pointed toward the container with feet about 400mm apart. Bend the knees slightly and keep your back straight
- 5) Maintaining a comfortable stance, grab both door handle levers, one in each hand. Lift slightly and swing both (usually one swings to the left and the other to the right) either to 90 or 180 degrees. This will break the seal of the door and cam it open. Note that some levers may swing the same way e.g. both to the left on one side/ both to the right on the other
- 6) If the seals are tight, start by removing the handles from the keepers, use both hands to crack the inner bar first, and then follow with the second outer bar
- 7) You can now stand up, and by grabbing both door bars, pull the door open
- 8) Repeat the same process on the left hand side.

Removing the Tarp, Cable, Roof Bows and swinging Rear Header

- 1) To remove the tarp, use an appropriate step ladder (check that any shipping container seals have been removed from the cable ends) reverse feed the cable though all "D" rings on

the walls, top side rails and front and rear headers. Remove all tarp eyelets from the "D" rings and, using two people, slide the tarp off the container, fold and store securely

- 2) To remove the roof bows, use an appropriate step ladder and two people, lift the roof bows upwards out of the securing brackets
- 3) To remove the swinging rear header, use an appropriate step ladder positioned outside of the arc of the swinging header, remove the securing pin from the hinge on the right hand side of the header and swing the header outwards and to the left. When closing the rear header ensure to keep hands free from the junction of the header and the corner post

TRANSPORT

Ensure tarps and doors are correctly fitted and secured prior to transport.

YOUR RESPONSIBILITY

If you are unsure about the capability or functions of this equipment, or are in doubt about how to use or maintain it correctly, please contact Royal Wolf and we can answer any questions in regards to the safe operations of this equipment.

FAULTS

In the event you are concerned that the equipment is not working correctly, or may be faulty, please contact Royal Wolf immediately.

For your nearest Royal Wolf branch call:

Australia 1300 037 686

New Zealand 0800 661 241